

## Spacer Cord Rosary Making Instructions.

To make a spacer cord Rosary you will need:-


- 1 1 x Cord x 1420 long ( with sealed ends)
- 2 White crucifix
- 3 53 x Hail Mary beads
- 4 6 x Our Father beads ( usually a contrasting colour)
- 5 28 clear plastic spacers

Cords are supplied with the ends sealed with clear lacquer to prevent the ends from fraying. **You should keep your fingers away from the cord end while stringing beads and tying knots.** Grasp the cord about 12mm (1/2") from the end.


Step 1.

Start with the cord about 100mm (4") from one end and lay the cord over the tool.

Cross the long end over the tail to form a "X". See photo :-

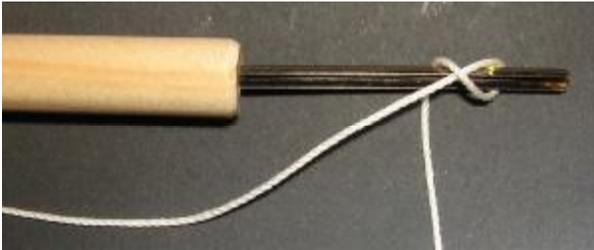

then wrap the long end over 3 times moving towards the handle of the tool.

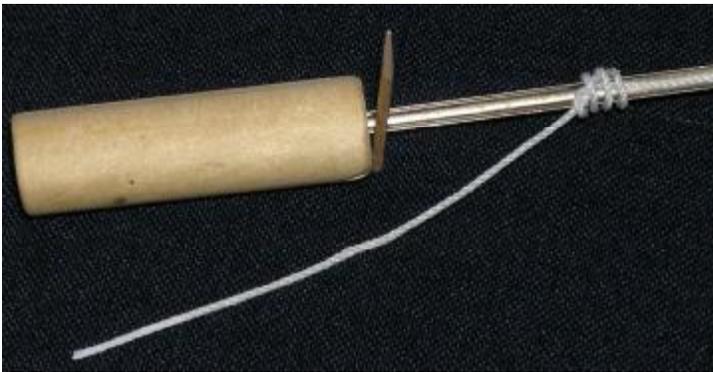


Feed the long end over the short tail and through the groove in the tool from the handle towards the end of the tool, then grasping the long end **12mm from the end** pull it through and slide the loose knot off the tool. See photo:-

Gently pull on both ends of the cord until the knot forms and then tighten firmly.

Step 2.

Now feed onto the long end of the cord 10 Hail Mary beads slide them down to the first knot and then feed on 2 clear plastic spacers. Then add 1 Our Father bead. See photo :-

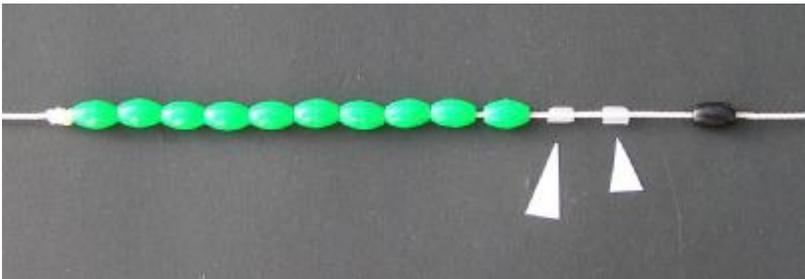

Spacers shown by white arrows.

Step 3.

Now feed on 2 clear plastic spacers and 10 more Hail Mary beads.

Step 4.




Step 7.

Slide 2 spacers then 3 Hail Mary beads onto the long cord.  
Feed 2 spacers and then the final Our Father bead.



Step 8.

Feed the cord through the hole in the crucifix 2 times and adjust the cords to leave about 20mm (3/4") gap between the last bead and the crucifix. Lay the Rosary over the tool so the beads are away from you and the cross and tool held in the left hand. Wrap the cord over the tool 5 times and then feed the cord through the groove from the handle towards the end of the tool.

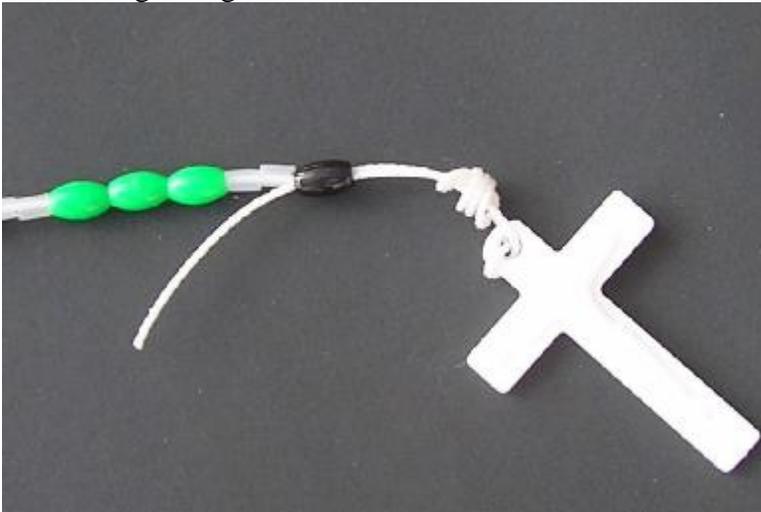

Slide the loose knot off the tool and gently feed the end of the cord through the last Our Father bead.

Now pull the loose knot up towards the last bead and firmly pull on the end of the cord to tighten the knot. Trim the cord as close to the bead as possible.

**The Rosary is now complete and ready to be packed into a plastic bag.**